



# How to Guide: Update Android Scanner UROVO i6310


*Aug 2020*




*MRJ Consultants  
37 Weavind Ave, Eldoraigne, Centurion, 0157  
Tel: (012) 654 0300  
Mail: [helpdesk@mrj.co.za](mailto:helpdesk@mrj.co.za)*

## How to update the Android Scanner UROVO i6310.


1. Power down the device.
2. Insert the SC card.
3. Hold POWER and Volume + until the device vibrates.
4. Then realise keys.
5. You will get this MSG.

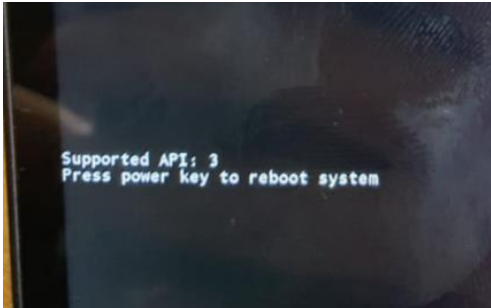

6. After the MSG pops up, press (+ - - + + - -) keys.
7. Then you will get this screen.

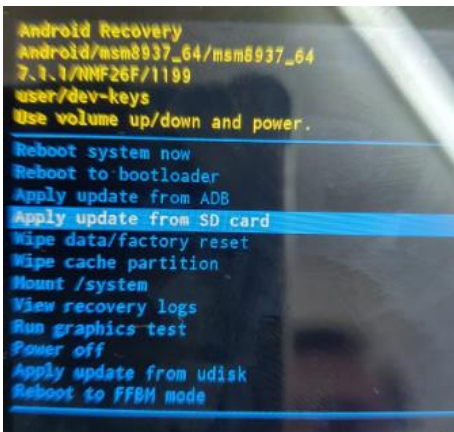

- Use the volume buttons to move up or down Then select the option (**Apply Update from SD Card**) use the power Button to select with.

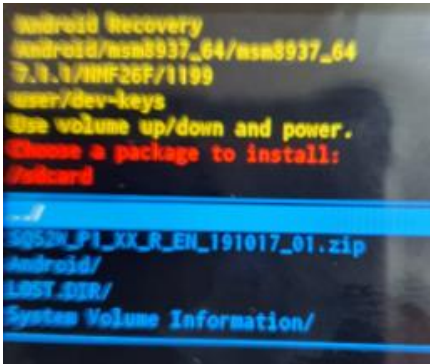

- Select the ZIP file then press the power button.
- Let the device install.

[FILE LOCATION \(OneDrive\GENESIS LASTEST EXEs\Documents\Manuals\User Manuals\HOW TO GUIDES\SQ52W\\_P1\\_XX\\_R\\_EN\\_191017\\_01.zip](#)

*That concludes the User Guide*